

Bilmärke	Modell	Typ	År	Filter
FORD	Courier	1.8 Di Diesel Miniflex	.2000-.2002	OL531
FORD	Courier	1.8 Di Diesel Miniflex skåp	.2000-.2002	OL531
FORD	Fiesta IV, 96-02	1.8 Di Diesel Kombi-sedan	04.00-01.02	OL531
FORD	Focus I, 98-04	1.8 Di Diesel Kombi	08.99-11.04	OL531
FORD	Focus I, 98-04	1.8 Di Diesel Kombi-sedan	08.99-11.04	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Kombi	09.02-11.04	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Kombi	03.01-11.04	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Kombi-sedan	09.02-11.04	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Kombi-sedan	03.01-11.04	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Sedan	.2003-.2005	OL531
FORD	Focus I, 98-04	1.8 TDCi Diesel Sedan	03.01-11.04	OL531
FORD	Focus I, 98-04	1.8 TDi Diesel Kombi	02.99-11.04	OL531
FORD	Focus I, 98-04	1.8 TDi Diesel Kombi-sedan	10.98-11.04	OL531
FORD	Focus I, 98-04	1.8 TDi Diesel Sedan	02.99-11.04	OL531
FORD	Tourneo Connect -14	1.8 Di Diesel Miniflex	06.02-	OL531
FORD	Tourneo Connect -14	1.8 TDCi Diesel Miniflex	.2011-.2014	OL531
FORD	Tourneo Connect -14	1.8 TDCi Diesel Miniflex	09.02-	OL531
FORD	Tourneo Connect -14	1.8 TDCi Diesel Miniflex	08.06-	OL531
FORD	Transit Connect I, 03-14	1.8 Di Diesel Skåp	09.02-	OL531
FORD	Transit Connect I, 03-14	1.8 TDCi Diesel Skåp	09.02-	OL531
FORD	Transit Connect I, 03-14	1.8 TDCi DPF Diesel Skåp	08.06-	OL531
FORD	Transit, -00	2.5 D Diesel Flak/Chassi	09.88-09.92	OL531
FORD	Transit, -00	2.5 D Diesel Flak/Chassi	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Flak/Chassi	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Husbil	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Husbil	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Husbil	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Husbil	.1989-.1991	OL531
FORD	Transit, -00	2.5 D Diesel Skåp	10.83-10.1986	OL531
FORD	Transit, -00	2.5 D Diesel Skåp	.1984-.1986	OL531
FORD	Transit, -00	2.5 Di Diesel Buss	08.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Buss	08.91-07.94	OL531
FORD	Transit, -00	2.5 Di Diesel Buss	07.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Buss	09.91-07.94	OL531
FORD	Transit, -00	2.5 Di Diesel Buss	08.97-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Flak/Chassi	08.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Flak/Chassi	09.91-08.94	OL531
FORD	Transit, -00	2.5 Di Diesel Flak/Chassi	08.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Flak/Chassi	09.91-08.94	OL531
FORD	Transit, -00	2.5 Di Diesel Flak/Chassi	05.99-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Skåp	06.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Skåp	05.91-06.94	OL531
FORD	Transit, -00	2.5 Di Diesel Skåp	06.94-03.00	OL531
FORD	Transit, -00	2.5 Di Diesel Skåp	05.91-06.94	OL531
FORD	Transit, -00	2.5 Di Diesel Skåp	05.99-03.00	OL531
FORD	Transit, -00	2.5 Diesel Buss	12.85-01.89	OL531
FORD	Transit, -00	2.5 Diesel Buss	09.88-09.92	OL531
FORD	Transit, -00	2.5 Diesel Flak/Chassi	10.83-10.86	OL531
FORD	Transit, -00	2.5 Diesel Flak/Chassi	01.86-01.89	OL531
FORD	Transit, -00	2.5 Diesel Skåp	01.86-09.91	OL531
FORD	Transit, -00	2.5 Diesel Skåp	10.88-09.91	OL531
FORD	Transit, -00	2.5 TD Diesel Buss	10.92-07.94	OL531
FORD	Transit, -00	2.5 TD Diesel Buss	01.95-03.00	OL531
FORD	Transit, -00	2.5 TD Diesel Buss	09.91-07.94	OL531
FORD	Transit, -00	2.5 TD Diesel Flak/Chassi	11.92-08.94	OL531
FORD	Transit, -00	2.5 TD Diesel Flak/Chassi	08.94-03.00	OL531
FORD	Transit, -00	2.5 TD Diesel Flak/Chassi	09.91-08.94	OL531
FORD	Transit, -00	2.5 TD Diesel Skåp	10.92-06.94	OL531

FORD	Transit, -00	2.5 TD Diesel Skåp	06.94-03.00	OL531
FORD	Transit, -00	2.5 TD Diesel Skåp	05.91-06.94	OL531
FORD	Transit, -00	2.5 TDi Diesel Buss	07.94-03.00	OL531
FORD	Transit, -00	2.5 TDi Diesel Flak/Chassi	08.94-03.00	OL531
FORD	Transit, -00	2.5 TDi Diesel Skåp	06.94-03.00	OL531